



TWO-DOOR MODEL SCRATCH PAD INSTALLATION – FOR OPEN BEAM GARAGE

Step 1 – Photo of Tools needed for Scratch Pad installation (plus a ladder); Purchase approx. 10 ft. length of 1 inch dia. wood closet hanger dowel at your hardware store. Installation is a 45 minute job.

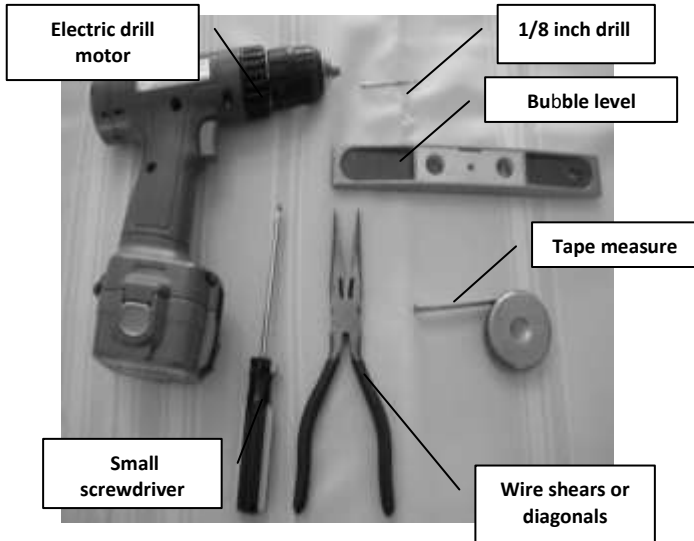


Step 2 – Read and remove red Child Safety Warning tag. Attach plastic coated wire rope (36 feet provided) through end hole and attach with 2 clamps (included in parts bag).

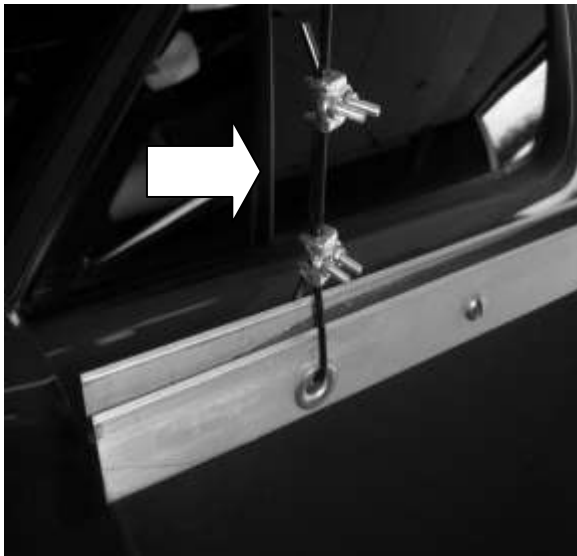

Step 3 – Place 10 ft. length of wood closet hanger dowel across beams of garage.




Step 4 – Loop wire rope up over dowel – then, down back through middle hole of metal strap – then, loop wire rope over dowel again, aiming toward opposite strap end – then bring wire rope down to end hole in strap. Raise and adjust Scratch Pad to desired height and level position while pulling slack wire rope through holes.

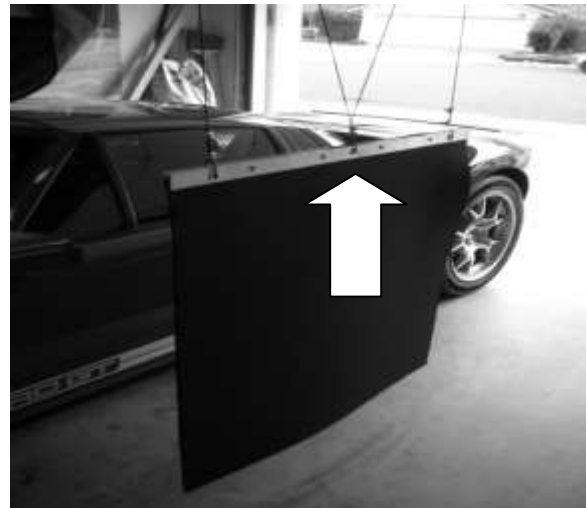

Step 5 – Attach metal clamps to the level Scratch Pad: 2 clamps at both end wires (first end was done at Step 2); and attach 1 clamp at the 2 points where wire rope loops over dowel


TWO-DOOR MODEL SCRATCH PAD INSTALLATION – FOR OPEN BEAM GARAGE

to secure into position (1 remaining clamp will be attached at Step 8). Important -- Ensure Scratch Pad wire rope attaches over wood dowel at a point which clears back edge of opened garage door. Also, ensure that the Scratch Pad is in the proper position to protect side-by-side parked autos at when doors swing outward.

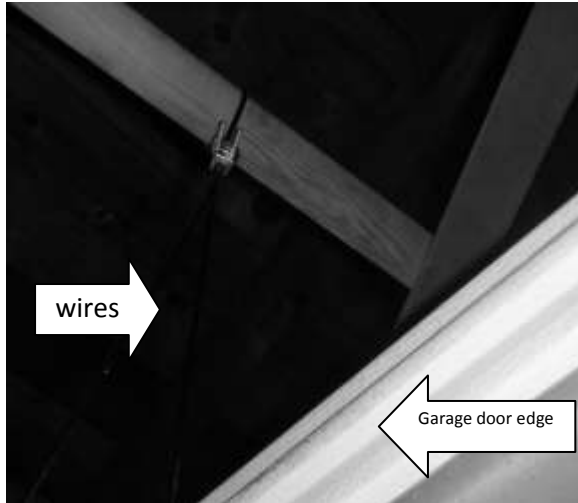

Step 6 – Snip excess wire rope with diagonal pliers or wire shears and save surplus wire rope to use for cross-guy wires.

Step 7 – At nearest overhead crossing wood beam, mark and drill 1/8 inch hole in wood beam 16 inches outward from centerline directly over the hanging Scratch Pad. With small screwdriver used as a lever through the screw eye, drive eye screws (included in parts bag) into each of the two holes in the wood beams; results should roughly form the figure of a cross for anchoring the cross-guy wires.

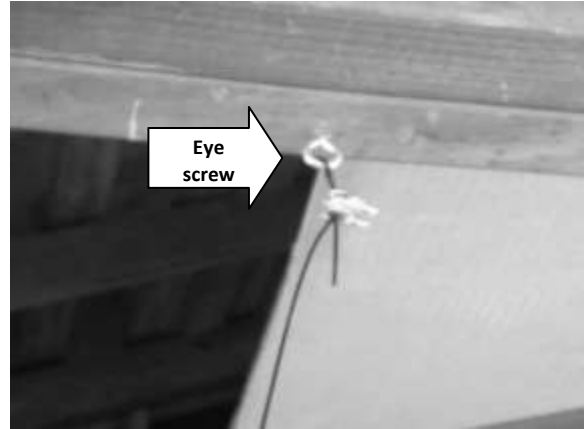

Step 8 -- Attach and clamp one end of surplus wire rope at one eye screw. Drop wire rope down through middle hole in metal strap of Scratch Pad. Return the wire hole to the opposite side eye screw anchored in the wood beam and attach a clamp once the wire rope is pulled tight. Last, attach middle clamp around all gathered wire ropes passing through middle hole in metal strap of the Scratch Pad. Snip surplus wire end at eye screw. Tighten all clamps. Correctly installed Scratch Pad should not allow for any cross-swing of the metal strap. Finished middle clamped wires should appear as follows:

